


# 4G LTE Network Extender 3 for Enterprise

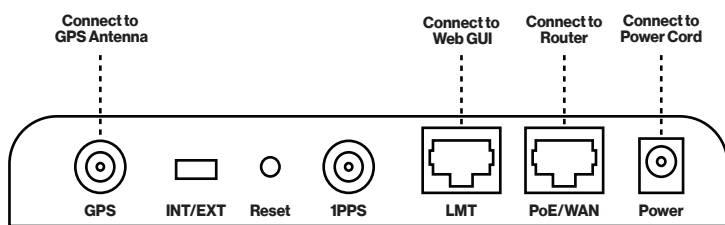

## Instructions

- 1 Connect the GPS antenna cable to the GPS port.
- 2 Position the GPS antenna puck near a window so it provides a clear and open view of the sky.
- 3 Connect the Ethernet cable to the PoE/WAN port and connect the other end of the cable to the local router/switch.
- 4 If there is a Firewall in the network, please ensure the following server connections are available to the eFemto. The servers' FQDN/IP addresses can be found in the Network Extender User Guide.
  - GPS Assistance Server:** TCP port 80
  - DNS Server:** UDP port 53
  - NTP Server:** UDP port 123
  - Security Gateway:** UDP port 500/4500
  - CMP:** TCP port 80
- 5 Plug in the power supply to the Power port and twist to lock (for installations where PoE is not supported).
- 6 **OPTIONAL STEP** - For local configuration, connect a laptop to the LMT port to access the Web GUI. For detailed instructions refer to "Admin website access" in the Network Extender User Guide.
- 7 Mount the Network Extender to a wall or ceiling. Please wait up to 30 minutes for the unit to complete setup and the Status LEDs to turn GREEN indicating normal operation.

Visit [verizon.com/support/4g-lte-network-extender-enterprise-basics/](https://www.verizon.com/support/4g-lte-network-extender-enterprise-basics/) or scan the QR code for detailed instructions and device information.



For more information about our privacy practices, visit [verizon.com/about/privacy/](https://www.verizon.com/about/privacy/)

**Customer Support:** 800-922-0204  
DOC-3197-01  
Rev 1.0



PAPER  
INSERTS

[how2recycle.info](http://how2recycle.info)

US ONLY

© 2021 Verizon